

# PLUS

## Safety Precautions


[Please Read Before Use]


### Before Use

#### About the Pictograms

In this "Instruction Manual," the "Installation and Assembly Manual," and on the product itself, various pictograms are used to ensure the product is used safely and correctly, and to prevent harm or damage to users, others, or property.







The meanings of these symbols are as follows. Please make sure to understand them thoroughly before reading the main text.

 **WARNING** This section indicates a potential risk of death or serious injury.


 **CAUTION** This section indicates a potential risk of minor or moderate injury, or property damage only.


#### MEANING OF PICTOGRAMS


#### Examples


	This symbol indicates a caution, including danger or warning. The specific cautionary details are shown within the illustration.		Warning: Risk of electric shock
	This symbol indicates a prohibited action. Specific details of the prohibition are shown within or near the illustration.		Do not disassemble
	This symbol indicates a regulated or mandatory action. The specific instructions are shown within the illustration.		Unplug the power plug from the outlet

### WARNING

 **Do not open or disassemble the unit**  
Do not remove the rear panel of the unit unless you are a qualified service technician.  
**Do not disassemble** For internal inspection, adjustment, repair, or cleaning, please contact the dealer where you purchased the product or the "Vision Customer Center"


 **Keep away from water**  
Do not place vases, flower pots, cups, cosmetics, chemicals, or containers filled with water on top of this unit.  
If water spills or enters the unit, it may cause fire or electric shock.


 **Do not place the unit near water or in locations where it may get wet.**  
If water enters or comes into contact with the unit, it may cause fire or electric shock.  
Avoid using the unit near windows during rain or snow, or in outdoor environments.

 **Do not use if the unit is malfunctioning.**  
If you notice smoke, strange smells, or unusual sounds may cause fire or electric shock, immediately turn off the power and unplug the USB adapter.  
After confirming that the smoke has stopped, contact your dealer or the **Vision Customer Center** for repair.  
Do not attempt to repair the unit yourself, as it is dangerous.

### WARNING


 **Installation must be performed by qualified personnel only.**  
Improper installation may cause the unit to fall and result in injury.


 **Wall mounting requires professional installation.**  
Ensure that the wall can support the total weight of the unit and mounting hardware over time and withstand earthquakes.  
If the wall is not strong enough, reinforcement is required.  
(For installation, please contact your dealer.)


 **Handling the USB Power Cable**  
Damaging the USB cable for power supply may cause fire or electric shock.


- The included USB power adapter and cable are exclusively for this product. Do not use them with other devices or for other purposes.
- Do not pinch the cable between the product and walls, racks, or shelves during installation.
- Do not modify or damage the cable.
- Do not place heavy objects on it or pull it forcefully.
- Keep it away from heat sources and do not heat it.
- Do not bend it excessively.
- When unplugging, always hold the USB power adapter—do not pull the cable.


#### About the USB Power Adapter


 • Do not plug in or unplug the USB power adapter with wet hands. Doing so may cause an electric shock.

 • When moving the unit, turn off the power and unplug the **USB power** adapter first. Moving it while connected may damage the USB cable or its connector, leading to fire or electric shock.

 • Insert the **USB power** adapter fully into the outlet. Incomplete insertion may cause heat buildup or dust accumulation, resulting in fire. Touching the metal prongs may also cause electric shock.

 • If there is dust or metal debris on or around the **USB power** adapter's terminals, unplug it and clean it with a dry cloth before use. Using it in that condition may lead to fire or electric shock.

 **Handling the USB Power Adapter**  
The USB power adapter and cable generate heat.  
Ensure adequate spacing around them and do not bundle the power cable.  
Excessive heat may cause fire.

 **Do not touch the USB power adapter during a thunderstorm.**  
Touching it may result in electric shock.

Continued on the back

## CAUTION



### **Do not stand on or place heavy objects on the unit.**

Do not climb on the unit, especially in environments with small children. It may fall or break, causing injury.  
Do not place heavy items on top of the unit, as it may become unbalanced and fall, leading to injury.



### **Do not hang or lean on the unit.**

Doing so may cause it to tip over and result in unexpected injury.



### **Do not place the unit on unstable surfaces.**

Installing it on a wobbly or slanted surface may cause it to fall, leading to injury.



### **Do not lift the unit alone.**

When installing or moving the unit, always have at least two people lift it.  
Lifting it alone may cause it to fall and result in injury.



### **Handling the Stand**

(for stand-type models)

To prevent the unit from tipping over, please observe the following precautions.  
Failure to do so may cause injury or damage.

- Use only on a flat surface.
- When stationary, lock the casters.
- When moving the unit, unlock the casters and carefully support both sides. Avoid sudden impact.
- When adjusting the height or lifting the unit, always have at least two people lift it.
- Do not lean on the unit or apply unnecessary force to the top.



### **Reflected Light on the Sheet Surface**

Do not use the sheet surface of the Creative Board as a projector screen.  
Reflected light from the projector may cause eye strain or other symptoms.  
Avoid pointing a laser pointer at the sheet surface, as it may lead to unexpected accidents.



### **Unplug When Not in Use**

If the unit will not be used for an extended period, unplug the USB power adapter from the outlet.  
Leakage current may cause a fire.



### **Installation Location**



- Do not place the unit in hot areas exposed to direct sunlight or in the path of air conditioner airflow.



- Avoid locations exposed to oil fumes or moisture, such as near stovetops or humidifiers.



- Install the unit near a wall outlet.

- Ensure the USB power adapter can be easily unplugged.

## **Important Notes**

### **Do not use ruled-line tape or similar products.**

Do not move the sheet with tape or labels attached, as this may cause malfunction.

### **Avoid damaging the sheet surface.**

Do not hit or stab the sheet with sharp or hard objects.

### **Keep seams clean.**

Make sure seams between sheets are clean. Dirty seams may be copied unintentionally.

### **Do not clean with chemicals.**

Do not use thinner, benzine, or similar solvents on the sheet or device. These may cause discoloration or damage.

### **Write within the readable area.**

Anything drawn outside the designated input area may not be copied, printed, or saved to memory or a computer.

### **Use Only the Dedicated Marker**

Please be sure to use the dedicated marker and eraser. Using other markers or erasers, or rubbing the sheet directly with your hands, may damage or stain the sheet, and the ink may become difficult or impossible to erase. Always store the marker horizontally, as it may become harder to erase if stored otherwise.  
Do not leave writing on the sheet for extended periods, as it may also become difficult to erase.

### **Regarding Sheet Movement**

- Do not move the sheet while magnets are still attached. In rare cases, the magnets may get caught in the unit and cause a malfunction. Also, magnetic sheet-type magnets cannot be used.
- Sudden movement may damage the machine's drive components. Please move it slowly.
- Do not move the sheet while sticky notes are attached. This may lead to malfunction.
- Do not use the eraser or similar items while the sheet is moving.

### **About USB Cable**

If you use a USB cable other than the one provided with this unit, please use a USB shielded cable certified with the USB-IF logo.

Do not connect this unit to a USB hub. It may not operate properly.

### **About USB Memory**

- We recommend that you regularly back up data stored on your USB memory to another medium to prevent data loss or damage.
- Please note that our company assumes no responsibility for any loss or damage to the data stored in the internal memory (scanned images) or on the USB memory.

### **Cautions When Disposing, Transferring, Exchanging, or Repairing the Product**

When disposing of, transferring, exchanging, or repairing this product, please ensure that any network information or stored data is deleted by the user to prevent potential data leaks.

When disposing of this product, please follow the regulations of your local municipality.

## **About Network Connectivity**

### **Network Connection Environment**

- The operating environment may be changed without prior notice. Please note that stable operation under all conditions is not guaranteed.
- Even if the environment meets all specified conditions, normal operation may not be ensured. Depending on the network status, display delays or communication errors may occur.

### **Disclaimer**

- The manufacturer shall not be held responsible for any communication issues or malfunctions that may occur in devices connected via network functions.
- The manufacturer assumes no liability for any indirect damages resulting from the use or inability to use the network function, including but not limited to loss of business profits or interruptions to operations.
- The manufacturer shall not be liable for any issues such as malfunctions or system freezes arising from interactions with connected hardware or software used in combination with this product.

## **Care and Maintenance**

To ensure consistently clear copies over time, please perform the following maintenance procedures regularly.

### **Cleaning the Sheet**

When the sheet becomes dirty, wipe it with a well-wrung damp cloth.

If cleaning is required urgently, use a dry cloth.

Be sure to use the sheet only after it has completely dried.

Do not use heavily soiled erasers, wet wipes, OA (office automation) cleaners, or neutral detergents.

### **Cleaning the Dust Tray and Main Unit Frame**

If marker ink stains the dust tray or the frame of the main unit, wipe the area with a well-wrung cloth dampened with water.

### **Eraser Maintenance**

Using a dirty eraser may cause smudging on the sheet surface, making it more difficult to clean.

Use the included dedicated replacement sponge for the eraser when necessary.

# **PLUS Corporation**