


4. How to use

Caution

Do not dirty or peel away or otherwise obscure the PLUS logo on the template sheet. Furthermore, do not attach the pen tray where it will cover part of the template sheet when the image is captured. Failure to adhere to the above will prevent the smartphone function from working.

Attaching the template sheet

Attach the template sheet by pressing its magnetic back up against either the top or the bottom of the whiteboard frame.

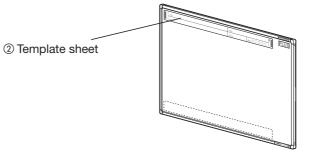

5. Specifications

			Main unit size (Excluding protruding parts)			Weight	Mounting brackets (QTY)
Order code	Product no.	Specifications	Width	Height	Thickness		Long side x short side
423-353	SWB-1812SW	Steel plate / Plain	1800 mm (70.87 inches)	1200 mm (47.25 inches)	20 mm (0.79 inches)	14 kg (30.84 lb)	2 x 0
423-354	SWB-1209SW	Steel plate / Plain	1200 mm (47.25 inches)	900 mm (35.43 inches)	20 mm (0.79 inches)	7.1 kg (15.64 lb)	2 x 0

Material: Frame and mounting brackets - aluminum, corner parts - ABS, core - cardboard, pen tray - ABS/magnet, board coated steel sheet

* Please note that specifications and design of this product may change without prior notice.

Ν	Note	Recommended marker : MARKER-BK black	[Order code
	NOLE	MARKER-RD red	[Order code

6. For enquiries relating to product specifications

Please direct enquiries relating to this product to the store of purchase or Authorized Dealer/Distributor as shown below. Please have the product number and serial number ready. These are found on the the product label.

Dispose of this product properly. Do not incinerate. If incinerated, the product may release toxic gas.

1. Please read and follow the directions below for proper and safe use.

ensure correct usage of the product. Please keep this manual in a safe place.

∕∆Warning

Smartphone Ready Whiteboard 'MTG Sync' - User's Manual

Thank you for your purchase of Smartphone Ready Whiteboard 'MTG Sync'. Please read through this User's Manual carefully to

- Do not remove the PLUS logo sticker. Doing so may render the product inoperable and will void the warranty.
- Setup the product in accordance with the Setup Instructions found in the back of this manual. Incorrect setup may lead to damage or injury.
- Do not disassemble or modify the product. Doing so could lead to damage or injury.

2. Cautions on usage

- 1. Do not set the product in hot locations, areas near a heating device or in direct sunlight. Doing so may lead to discoloration or warping.
- 2. Do not set the product in places exposed to dust or humidity. Doing so may lead to discoloration, warping or corrosion.
- 3. If water or other liquids are spilled on the product, wipe it dry immediately. Otherwise discoloration or warping may occur.
- 4. The template sheet and pen tray are attached to the whiteboard with magnets. Avoid close proximity with magnetic storage devices such as bank cards and train passes. There is a risk that the memory data could be damaged if such devices are brought within around 10 cm (4 inches) of the product. Do not place objects other than the markers and eraser in the pen tray. They may fall and lead to damage or injury.
- 5. Refrain from using the product outdoors or places where it may come in contact with water. It may lead to rust or damage.
- 6. Do not use thumbtacks, nails, ballpoint pens or other metal objects on the whiteboard as any damage they may cause is irreparable.
- 7. Avoid using tape or adhesive agents on the whiteboard.
- 8. Do not drop or hit hard objects on/against the whiteboard or frame. Doing so could lead to damage.
- 9. Mount this product on a flat wall so that it is level with the wall. If it is mounted at an angle, it could lead to damage or iniury.
- 10. Do not use the product in a rough manner or for any other purpose than that which it is intended. It could lead to malfunctions, damage or accidents.
- 11. Use the dry-erase markers and the included eraser to write on the whiteboard or erase.
- 12. Do not leave writing on the whiteboard for an extended period of time as it may become difficult to erase.
- 13. Make sure you do not use oil-based markers or paint markers as they cannot be erased. Always use dry-erase markers.

3. Cleaning

- 1. Avoid using benzene, thinner, petroleum, acid, polishing powder, scouring pads, hot water and so on when cleaning as it will damage the surface of the whiteboard.
- 2. If the whiteboard becomes dirty, wipe it with a water dampened, well-wrung out clean cloth. Writing can become difficult to erase if the whiteboard is dirty.

If the whiteboard is notably dirty, wipe using a mild detergent diluted more than 10 times, then wipe with a well-wrung out cloth to remove all detergent. Afterwards, wipe with a dry, soft cloth.

3. If the eraser becomes covered in a significant amount of marker ink, replace it with a new one. If not replaced, it will dirty the whiteboard and not erase writing properly.


The sponge of the eraser that comes with the main unit can be removed from the case and turned over for further use (double-sided).

A four-sided replacement eraser (ER-44369) is also available.



Attaching the pen tray

Attach the pen tray (magnetic) to the bottom edge of the whiteboard.

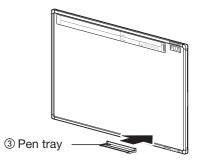

423-283] Recommended eraser : ER-44369[Order code 44-369] 423-284]




34-4616-13A





Smartphone Ready Whiteboard 'MTG Sync' - Setup Instructions

- Be sure to setup the product in accordance with the instructions below. Incorrect setup may lead to damage.
- When mounting the whiteboard, make sure the mounting brackets are securely set on the screws to prevent damage or injury.

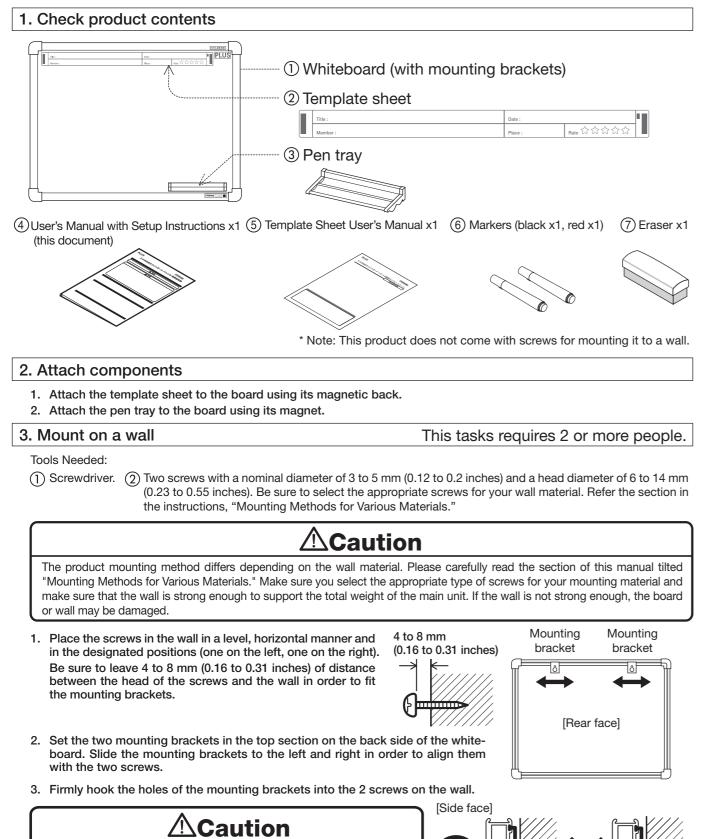

Mounting bracket


Make sure the mounting brackets holes are firmly hooked into the screws. It

is possible for the underside of the mounting brackets to catch on the screws

which may lead to the whiteboard falling. To ensure that the board is properly

anchored, carefully move it left and right and forwards and backwards.

- types from the below table.
- 2. Use screws with a nominal diameter of 3 to 5 and a head diameter of 6 to 14 mm (0.23 to 0.55 inches).
- Mount the selected plugs and anchors using the indicated mounting method.

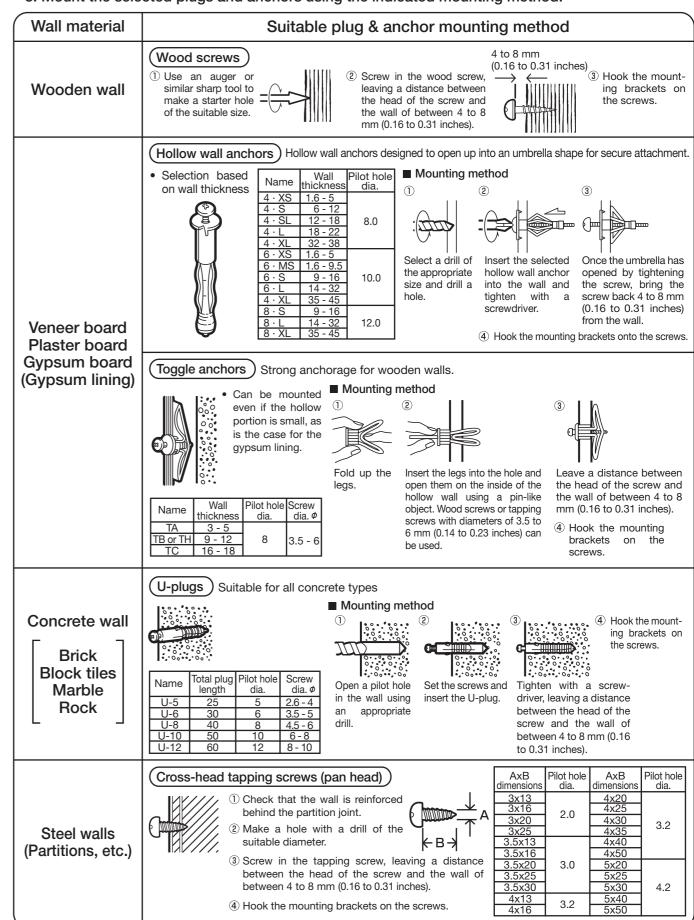

Mounting Method for Various Materials

1. Confirm the type of material that the wall is made of and select the suitable plug and anchor