

Partition Whiteboard Handling Instructions

We greatly appreciate your purchase of this Partition Whiteboard. Read these handling instructions carefully before using the board and be sure to use the board properly. Store these handling instructions in a safe place after reading them.

1. For safety, heed the instructions below.

WARNING

- Have a professional dispose of the board. Burning the board may generate toxic gases.

CAUTION

- Assemble and install following the assembly instructions on the back. Incorrect assembly or installation could lead to breakage or injury.
- Do not hang from or lean on the board. Doing so could cause the board to tip over and break and could cause injury.
- For models with casters, be sure to lock the casters. Be sure to unlock the casters when moving the board. Failure to do so could cause breakage or injury.
- Do not place or install near flames. Doing so could lead to fires.
- Do not use if any screws are loose. Retighten any loose screws before using. Failure to do so could cause the board to break or tip over.
- If you should discover any irregularities, do not continue using the board. Contact your store of purchase. Continued use could cause the board to break or tip over and could cause injury.
- Do not use for purposes other than those for which the board was designed. Doing so could lead to accidents or injury.
- Do not disassemble or modify the board. Failure to do so could cause breakage or injury.
- Do not use the board unless it is completely assembled and installed. Failure to do so could cause the board to break or tip over.

2. Cautions on Usage

1. Avoid hot places, such as places exposed to direct sunlight, near heating appliances, etc. Heat can cause discoloration or deformation.
2. Do not set in dusty or humid places. Dust and humidity can cause discoloration, deformation or corrosion.
3. Do not use outdoors or in places where the board could get wet. Doing so could result in rusting or breakage.
4. Do not clean the surface of the whiteboard with thinner, benzene, petroleum, acids, scouring powders, scrubbing brushes or hot water. Doing so could cause discoloration, scratches or other damage to the surface of the whiteboard.
5. Do not use tape or adhesive materials on the whiteboard surface.
6. Install the board in such a way that it remains level. Using the board when it is wobbly may result in deformation, breakage or injury.
7. Do not use the board roughly or use it for purposes other than those for which it was designed. Doing so may lead to malfunctions, breakage or accidents.
8. Use the dedicated markers and eraser to write on and erase the board.
9. Do not leave writing on the board for long periods of time. The writing may become difficult to erase.
10. Use the magnetic force to attach the chalk rail to the whiteboard surface. Keep such magnetic recording media as credit cards, commuter passes, floppy disks, video tapes and cassette tapes away from the chalk rail. The data recorded on them may be damaged if come within about 10 cm from the chalk rail.
11. Do not peel off the PLUS logo mark from the upper right of the board surface. If peeled off, the whiteboard will no longer be recognized by the MTG Sync application.

3. Cleaning

1. Use a damp, thoroughly wrung out cloth to clean the surface of the whiteboard. If the surface of the whiteboard is dirty, it will be difficult to erase the marker ink.
For tough dirt, use ethanol in the form of absolute alcohol or rubbing alcohol. Apply the ethanol to a clean cloth and wipe off the dirt.
2. Using a dirty eraser, such as one containing much marker debris, will soil the surface of the whiteboard and make it difficult to erase the marker ink. When an eraser starts getting dirty, replace it promptly.

4. About MTG Sync functions

• **MTG Sync functions**

“MTG Sync” is an application exclusively for whiteboards that is optimized for photographing on smartphones.

When you simply photograph the entire whiteboard surface, the photograph can be keystone-corrected and converted to light, easy-to-see data using unique frame recognition technology.



For detailed instructions on using MTG Sync, see the site below.

<http://www.plus-vision.com/en/product/mtgsync/index.html>


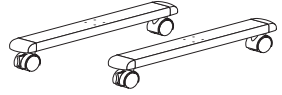
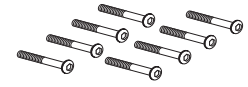
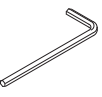

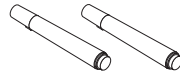
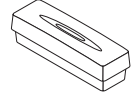



Assembly Instructions (to be performed by at least two people)

- Be sure to perform assembly and installation based on the Assembly Instructions (this manual). Incorrect assembly can lead to injury.
- Before assembling, check that all the materials and parts required for assembly are present.




List of parts and materials for assembly

| | | | |
|---|---|---|--|
| ① Whiteboard surface 1pc.  | ② Feet sets with casters 2 feet  | ③ Hexagonal socket head bolts M5×40: 8  | |
| ④ Hexagonal wrench 1pc.  | Chalk rail 1pc.  | Markers Black: 1, red: 1  | Eraser 1pc.  |
| Handling and Assembly Instructions (this manual) 1pc.  | | | |

Mounting the feet sets

1. Place the whiteboard surface ① on a table or other similar surface.
2. Use the hexagonal wrench ④ to temporarily tighten the hexagonal socket head bolts ③ (4 bolts each) of the feet sets with casters ② to the surface of the whiteboard ①. Fully tighten the temporarily tightened bolts.
 - There are 4 mount bolt holes on the feet. Mount with the wider of the 2 bolt holes facing the outside. If mounted in the other direction, the bolts will not be in the right position.

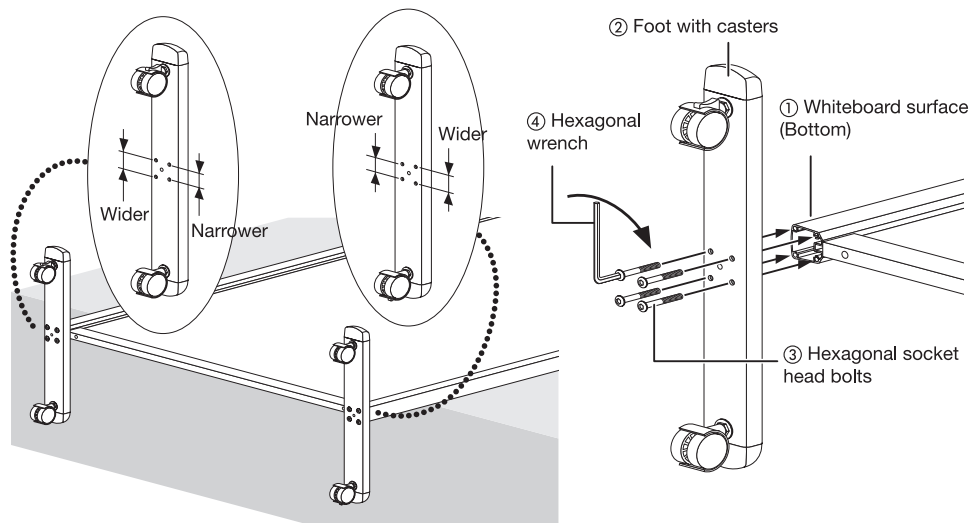


This completes assembly. Check again that the feet's bolts are securely tightened in the whiteboard surface.

Usage

This product is a stand-alone type whiteboard that can also serve as a partition. It is possible to write on both sides. Also, the surface of the whiteboard is a steel plate, so posters and other notices can be fastened to it using magnets.

Using the chalk rail

Use the magnetic force to attach the chalk rail to the whiteboard surface. Fasten the chalk rail in a position in which it will be easy to use (on either the front or back). To remove, pull the ends of the chalk rail forward.

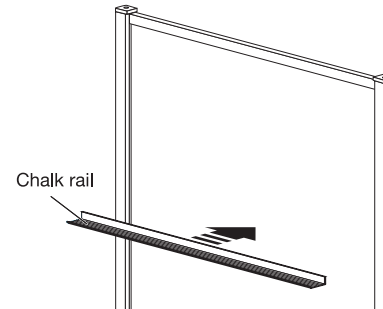

CAUTION


- Placing heavy objects on the chalk rail (maximum load: 750 g for the 900, 1 kg for the 1200) may cause the chalk rail to fall, resulting in injury. Only place markers and erasers on the chalk rail.

Using the caster lock mechanism

For products with feet sets with casters:

The casters - there is 1 caster each on the front and back sides as you face the whiteboard surface, and one set of casters on each side - have mechanisms to lock the wheels. When the lever is moved to the free (upper) side, the wheel is free to roll and the board can be moved. Conversely, when the lever is moved to the locked (lower) side, the wheel is locked.

* Always operate the lever using your hand.

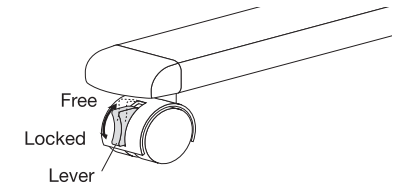

CAUTION

- Lock the caster's (2) stoppers before using the board. If the casters are not locked, the feet will be unstable, and using the board could lead to injury.

Moving the board

For products with feet sets with casters:

Be sure to set the casters' lock mechanisms to the free position and move the board in the direction indicated by the arrows.

