

Update the Copyboard's Internal Program

Download the update program from the PLUS Corporation website.

Preparations:


1. Download the "Copyboard Firmware Update" program for the CR-5 ("XXXXX.zip") from the PLUS Corporation website.
2. Unzip the "CR5_XX_X.zip" file and save the program file ("CR5_XX_X.mot").
3. If the copyboard's power cord is plugged into an outlet, unplug it.
4. Plug in the copyboard's power cord while pressing the Save button.
5. Once the display window has switched from "OP" to "UP", execute the "Copyboard Firmware Update" program.

1

Displaying the "Copyboard Firmware Update" screen.

Operate as described at "Hardware Setup" step 2 on page E-12 to display the "Hardware Setup" screen.


Click the "Copyboard Firmware Update" tab to switch to the "Copyboard Firmware Update" screen.

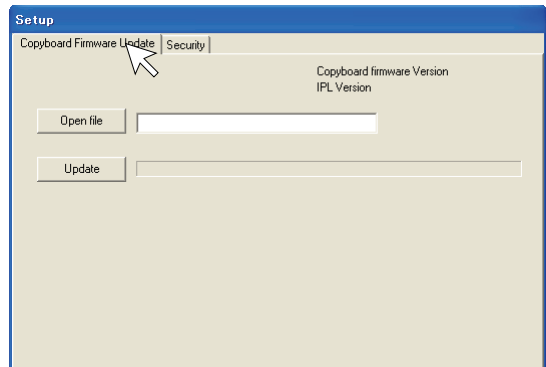

2

Open the "XXXXX" update file.

1. Click "Open file" to display the screen for opening the file.
2. Select the CR-5 update file ("XXXXX"), then click the "Open" button.

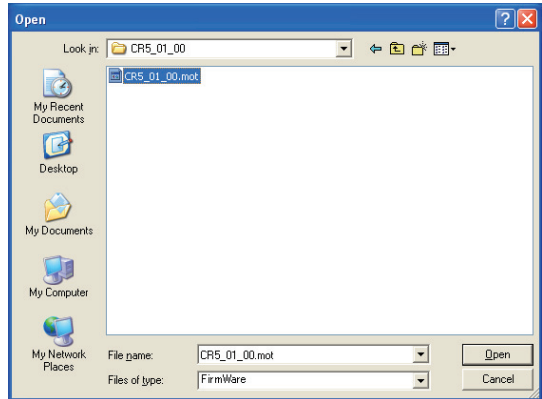

3

Click the "Update" button to start updating.

A status bar is displayed during updating. Please wait.

"RR" is displayed on the display window on the copyboard's control panel.

Notice

Do not perform other operations or turn off the copyboard's power during updating. Doing so could damage the copyboard.

Once "RR" is displayed on the copyboard's display window, unplug the power cord, then plug it back in and turn the power on.

