


Update the Copyboard's Internal Program

Download the update program from the PLUS Corporation website.


Preparations:

1. Download the "Copyboard Firmware Update" program ("M-12_XX_XX.zip") from the PLUS Corporation website.
2. Unzip the "M-12_XX_XX.zip" file and save the program file ("m12_XX_XX.mot").
For model M-125, save M-125_XX_XX.mot.
3. If the copyboard's power cord is plugged into an outlet, unplug it.
4. Plug in the copyboard's power cord while pressing the Save  button.
5. Once "UP" is displayed flashing in the display window, execute "Copyboard Firmware Update".

1

Displaying the "Copyboard Firmware Update" screen.


When a USB connection has been established between the personal computer and the Copyboard, the [Copyboard Firmware Update] screen will be displayed automatically.

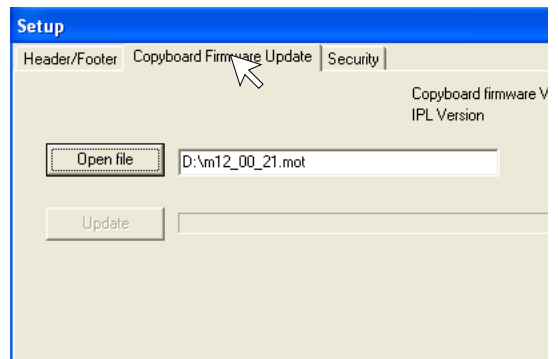

2

Open the "m12_XX_XX.mot" update file.

- ① Click "Open file" to display the screen for opening the file.
- ② Select the M-12 update file ("m12_XX_XX.mot"), then click the "Open" button.

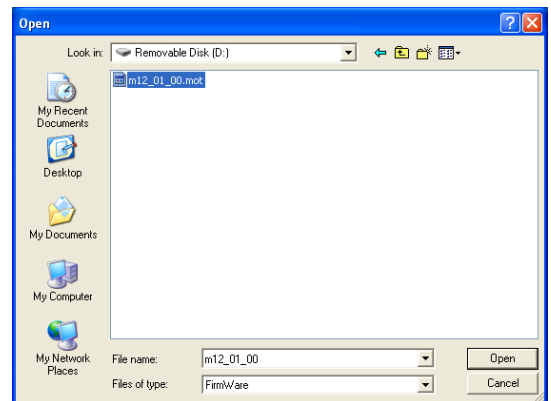

3

Click the "Update" button to start updating.

A status bar is displayed during updating. Please wait. When the update is completed, "RR" will be displayed flashing in the display window of the Copyboard control panel.

Notice

Do not perform other operations or turn off the copyboard's power during updating. Doing so could damage the copyboard.

After "RR" has begun flashing in the display window of the Copyboard, unplug the power plug from the power outlet, and then plug it in again.

