PLUS

Copyboard N-20J

Partition Hanger Instructions

These Instructions explain how to set up partition hangers for the N-20J Copyboard. Partition hangers are used to mount the Copyboard on a partition panel.

⚠ Warning

- Follow this guide when setting up and installing the partition hanger. Improper use may lead to injury.
- Please have 2 or more people hold the copyboard for installation and removal.
- For more information on installation, refer to the “User’s Manual” or “Assembly and Set up Manual” that came with the copyboard.

Partition Hanger Package Contents

Check that the package contains all of the following. Contact the store you purchased this from if there is anything missing.

Item	Name/Quantity	Item	Name/Quantity
<A>	Hanger brackets: 2	<E>	High panel brackets: 2
		<F>	High panel rubber pads: 2
<B>	Hanger bracket Pins: 2	<G>	M4x8 screws: 8 (black)
<C>	Hanger: 2	<H>	M4x8 Screw with washers: 4 (silver)
<D>	Rubber pads:2	<I>	M6x10 screws: 2

Setup and Installation

This apparatus works with partition panel as well as regular partition panels and allows for 5 different height adjustments.

The installation methods for the different types of partition panel are shown below.

- **Regular partition panels (1.3 to 1.6m) ..... 2 stages**
- **High partition (1.8 m only) ..... 2 stages**
- **High partition (2.0m, 2.1m)..... 1 stage**

Partition Panel and Copyboard height adjustment

A Regular partition panels (1.3 to 1.6m)		**B** High partition panel(1.8 m only)		**C** High partition panel (2.0m, 2.1m)
Approx. 250mm	Approx. 150mm		Approx. 100mm	Approx. 300mm
Support Bar: 2nd stage Hanger bracket: 1st stage	Support Bar: 2nd stage Hanger bracket: 2nd stage	Support Bar: 1st stage Hanger bracket: 1st stage	Support Bar: 1st stage Hanger bracket: 2nd stage	Use the High panel bracket

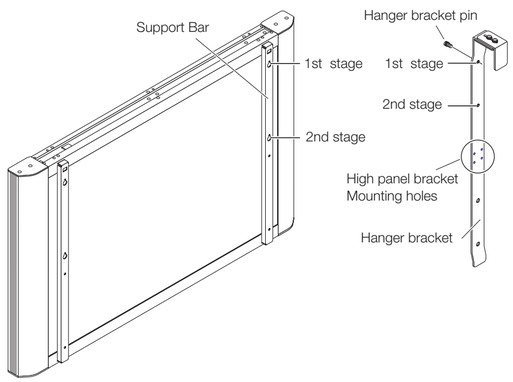

Step 1 Attaching the Hangers to the hanger bracket

Assemble the Hanger bracket first, if the copyboard is hanged from the partition of various height.

Sandwich the Hanger bracket<A> with Hanger<C> and Rubber pad<D> and temporary join them with 2 x M4x8 Screw with washer <H> .
Apply the same method for left and right hooks. After hanging the Hooks from the partition, adjust them to the width of partition panel and secure them.
• The Hanger can be adjusted to the panel width from 50 to 75mm.
The installation method is different according to the partition height.

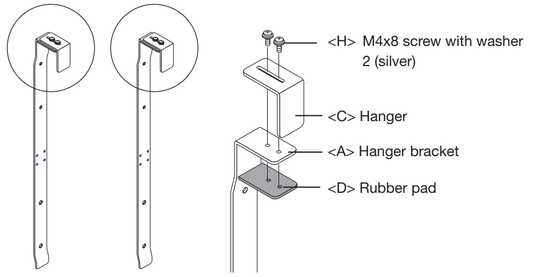

Step 2 Attaching the hanger bracket to the copyboard

A Regular partition panel (1.3 to 1.6m)

Instruction is for single bracket for hooking. Apply the same to the other of the pair.
① Attach Hanger bracket Pin<B> to Hanger bracket<A> on the 1st or 2nd stage.
* 1st stage will adjust the distance between the upper part of copyboard and the upper part of partition approx.250mm, 2nd stage approx.150mm.
② Insert Hanger bracket Pin<B> to the 2nd stage mounting hole of the support bar of the copyboard and slide upwards to secure it.
③ Secure Hanger bracket<A> by using the screw M6x10<I>

Proceed to Step3

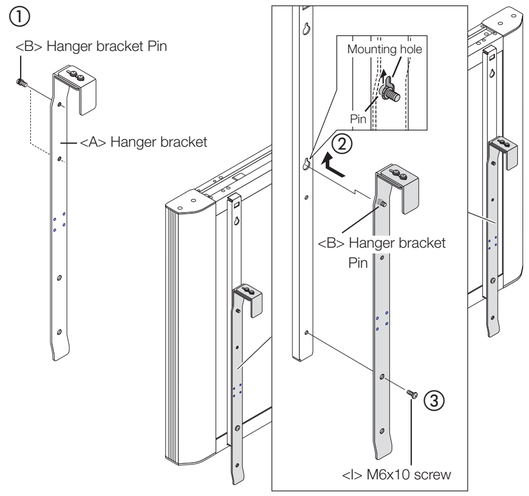

B High Partition panel (1.8 m only)

Instruction is for single Hanger bracket for hooking. Apply the same to the other of the pair.
① Attach Hanger bracket Pin<B> to Hanger bracket<A> for Hook on the 1st or 2nd stage.
* 1st stage will adjust the distance between the upper part of copyboard and the upper part of partition about the same, 2nd stage approx.100mm.
② Insert Hanger bracket Pin<B> to the 1st stage mounting hole of the support bar of the copyboard and slide upwards to secure it.
③ Secure Hanger bracket<A> by using the screw M6x10<I>.

Proceed to Step3

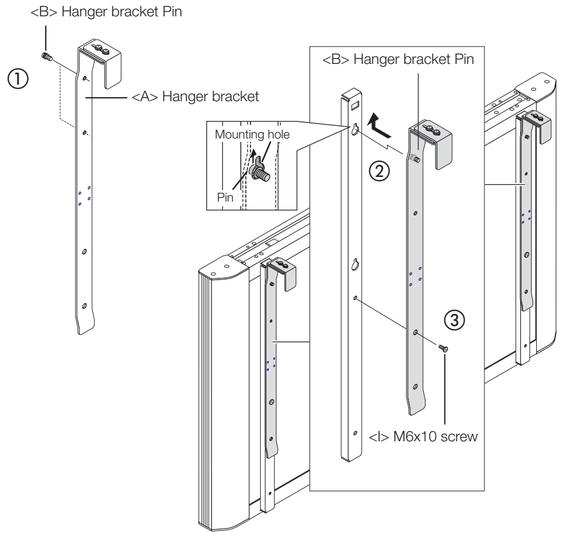

C High Partition panel (2.0m, 2.1m)

Instruction is for single bracket for hooking. Apply the same to the other of the pair.
① Hook High panel bracket<E> for High panel into the upper square hole on the support bar of the copyboard.
a. Tilt it to insert into the square hole b. Return it to upright position.
② Install Hanger bracket<A> to High panel bracket<E> for High panel using 4 x M4x8 screw<G>. Secure it.
③ Attach High panel rubber pad<F> for High panel to the lower part of the support bar of the each copyboard.

Proceed to Step3

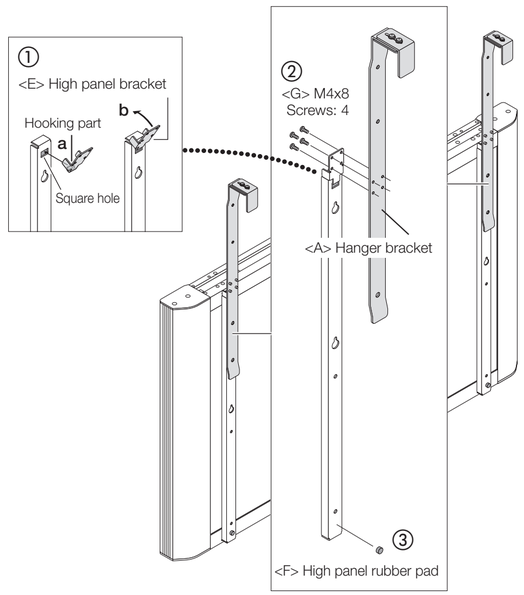

Step 3 Mounting on a partition panel

Apply the Partition Hanger (attached to the copyboard) to the partition panel. Secure it on the partition by adjusting it to meet the partition width.

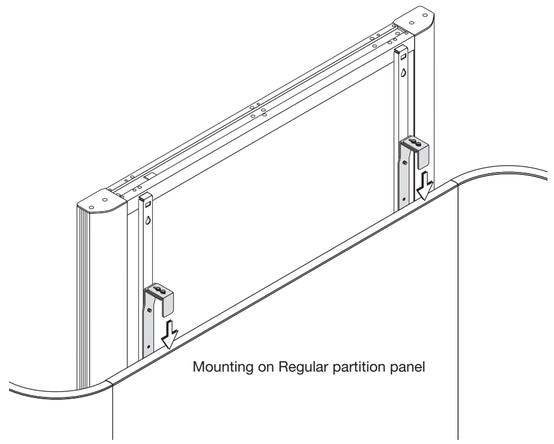

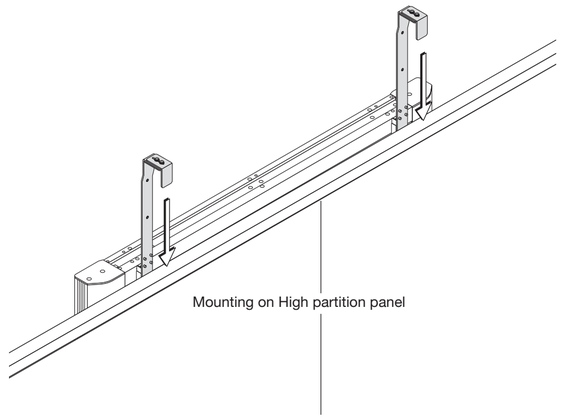

⚠ Warning

The copyboard is only hanging on a partition. Do not attempt to lift thecopyboard from the bottom.
Doing so may cause the copyboard to separate from the partition and to fall over.

⚠ Warning

The legs or supports of unstable partition panels should be fixed to the floor or other stable surface to prevent the partition panels from falling over.

PLUS Corporation

31-4606-12A